



CH123E

FLUSH MOUNTING THERMOSTAT 230V

Dear customer, thank you for purchasing the Fantini Cosmi flush mounting thermostat. model CH123E.

This manual contains all the information required for a correct installation and configuration.

You can also download this manual in digital format and in several languages by framing the QR code below and entering the product code.









ITALIANO
ENGLISH
FRANÇAIS
ESPAÑOL
DEUTSCH
PYCCKNЙ
VKPAÏHCЬКИЙ

Warnings



Carefully read the installation instructions, safety warnings, operating modes and maintenance instructions in this booklet, which should be kept for further reference.

 
- After removing the packaging, check the integrity of the appliance; if in doubt, do not use it.
- Installation of the appliance should only be carried out by qualified technicians in compliance with current standards.
- The use of any electrical appliance involves observing certain basic rules. In particular:
 - DO NOT touch the device with wet hands or wet feet or bare feet.
 - DO NOT expose the device to the weather (rain, sun, etc.).
 - Before carrying out any maintenance or cleaning work, switch off the power supply.
 - DO NOT power the appliance with the cover open.

INDEX

1.	TECHNICAL FEATURES	pag. 4
2.	INSTALLATION	pag. 5
3.	ELECTRICAL CONNECTIONS	pag. 7
4.	DISPLAY AND KEYS DESCRIPTION	pag. 8
5.	OPERATION	pag. 8
6.	THERMOSTAT CONFIGURATION	pag. 11
7.	MAINTENANCE	pag. 13
8.	DISPOSAL	pag. 13

Contents of package

- 1 thermostat
- 1 frames
- 1 white covers, type A
- 2 screws
- 1 user manual



1 - TECHNICAL FEATURES

Power supply	230V 50Hz
Contact range	5(3)A 250V~ voltage-free switching
Maximum room temperature	T45 °C
Temperature adjustment scale	2 ÷ 40 °C, increase 0.1°C
Measurement scale/room T display	-40 ÷ 50 °C
Type of action	1B microdisconnection
Degree of protection	IP20
Pollution degree	2
Pulse voltage	4000V
Electric insulation	Double insulation
Software	Class A
Thermal gradient of reference	4K/h
Assembly	recessed in 3-module box type 503, with 2 screws
Dimensions	68 x 52.2 x 58 mm
Compliant with standards	EN 60730-1 and second parts
ErP classification	ErP Class IV; 2% (Reg. EU 811/2013 - 813/2013)
•	ErP Class IV; 2% (Reg. EU 811/2013


Product not manufactured in Italy.

2 - INSTALLATION

The CH123E thermostat must be installed in a 3-module recessed box, in the middle of the apartment, preferably 1.5 m off the ground. The required components, all included in the package according to the following table.

MODELS	COVER TYPE	FRAME TYPE	TABS TO DETACH	COVER COLOR	ADAPTERS KIT **
Bticino Matix GO	А	3	YES position "A+C"	white	
Bucino Maux 00		3		silver	Code 1576891
	А		NO -	white	Code 1576895
Bticino Living Now		4**		black	Code 1576896
				sand	Code 1576897
Vimar Eikon Evo	Α	3	YES position "A+D"	white	
Vimar Arké	Α	3	NO	white	
	C** 3		YES position "A+C+D"	white	Code 1576892
Vimar Linea		3		black	Code 1576893
			sand	Code 1576894	



 

cut 8 or 12 tabs according to type of cover plate



Installation and maintenance operations must be carried out with the system's electrical power switched off and by qualified personnel, in compliance with the regulations in force.

PERFORM THE FOLLOWING OPERATIONS:


- act on the master switch on the electric panel to cut power to the electrical system;
- 2. when required, detach the tabs according to the type of plate;
- 3. fasten the thermostat to the suitable frame;
- 4. mount the cover on the body of the thermostat.
- 5. connect the two wires of the boiler to terminals 1-2 of CH123E;
- 6. screw the frame onto the box using the provided screws;
- 7. mount the plate;
- 8. switch the electric system back on.

3 - ELECTRICAL CONNECTIONS





Installation and maintenance operations must be carried out with the system's electrical power switched off and by qualified personnel, in compliance with the regulations in force.

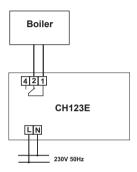


PLEASE NOTE: when CH123E is disconnected, the boiler contact remains in its current position.

During black-outs, the programmed parameters will not be lost as the settings are stored in a non-volatile memory.

4 - DISPLAY AND KEYS DESCRIPTION


The thermostat is equipped with 4 keys, the function of which varies depending on the situation. It is described by the symbol which appears on the display next to the key.

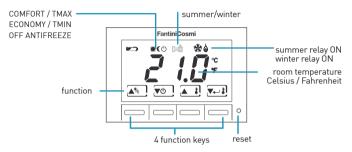

N.B.: the first press of a key only turns on the display light to allow for better viewing.

5 - OPERATION

 
SUMMER/WINTER SELECTION




Press both keys simultaneously to select SUMMER (cooling) $\mbox{\em @}$ or WINTER (heating) $\mbox{\em @}$ mode.



OPERATING MODE SELECTION

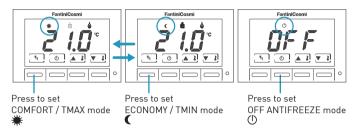

CUSTOMISE THE TEMPERATURE

 


When you have set the operating mode # \P Φ , press the two keys (increase Φ or decrease \P) to set the temperature:

ECONOMY / TMIN 2 ÷ 40 °C COMFORT / TMAX 2 ÷ 40 °C OFF ANTIFREEZE 0 ÷ 7 °C

ANTIFREEZE temperature cannot be set in summer mode.



 CHOICE OF BACK LIGHTING DURATION




Press together, and keep pressed, to change back lighting duration.

Increase\decrease back lighting duration pressing ▲ or ▼ and while keeping ECONOMY/COMFORT and ON/OFF keys pressed.

You may choose the time during which back lighting remains on:

 OFF \rightarrow always off **1 sec.** ...**10 sec. ON** \rightarrow always off





6 - THERMOSTAT CONFIGURATION



ATTENTION: only qualified personnel may configure the device.

Configuring the thermostat allows you to customise the device's operating parameters. Perform the following steps to access the configuration program:



- 1 Using a sharp object, press the reset button while holding down the "COMFORT/ECONOMY" button at the same time.
- 2 When the display reads P01, release the "COMFORT/FCONOMY" button



The display represents the configuration parameters by an index: P01, P02....

Press \blacktriangle or \blacktriangledown to scroll the parameter indexes.

Press \longleftarrow to edit a parameter. Use \blacktriangle and \blacktriangledown to change the value of the parameter. Press \longleftarrow again to go back to the parameter index.

To exit parameter configuration, press \blacktriangle or \blacktriangledown until the display reads "END". Press \hookleftarrow .

Index	Parameter	Default	Values
P01	display mode	1	1 = view room temp 2 = view set point
P02	correction of displayed tem- perature value	0.0°C	+/- 4°C (step 0.1°C)
P03	winter lower limit set point temperature	2.0°C	2.0°C40.0°C (step 1.0°C)
P04	winter upper limit set point temperature	40.0°C	2.0°C40.0°C (step 1.0°C)
P05	summer lower limit set point temperature	2.0°C	2.0°C40.0°C (step 1.0°C)
P06	summer upper limit set point temperature	40.0°C	2.0°C40.0°C (step 1.0°C)
P07	differential adjustment	0.3°C	±0.3°C±2.0°C * (step 0.1°C)
P08	temperature scale	CEL	CEL = Celsius FAH = Fahrenheit
END	exit parameter configuration and store values		

^{* ± 0.3°}C value suited for plants with slow thermal inertia,

^{± 2°}C value suited for very reactivate plants.

7 - MAINTENANCE

Use only a soft and dry cloth to clean the device. Do not use water or other liquid substances

6 - DISPOSAL



Symbol of the crossed-out wheeled bin indicates that the product must be collected and disposed of separately from household waste. Batteries and the integrated accumulators may be disposed of together with the product. They will be separated at the recycling facilities. A black bar indicates that the product was placed on the market after August 13th, 2005. Participating in the separate collection of products and batteries contributes to the correct disposal of these materials and therefore avoids possible negative

consequences for the environment and human health. For more detailed information on the collection and recycling programs available in your country, contact the local authorities or the sales point where you purchased the product.

Intellicomfort CH123E



FANTINI COSMI S.p.A. Via dell'Osio, 6 - 20049 Caleppio di Settala, Milan - ITALY Ph. +39 02 95682.222 | export@fantinicosmi.it